




## INSTALLATION INSTRUCTIONS

### METHOD 1 – 1 DOOR WITH SCREWS


#### PARTS LIST

- 1 Fly screen
- 2 Adjuster profile
- 3 Double-sided tape for Adjuster profile
- 4 Side profile (optional)
- 5 Sliding profile (optional)
- 6 Push spring
- 7 Push group
- 8 Fixing Plate
- 9 Floor plate


#### PARTS LIST

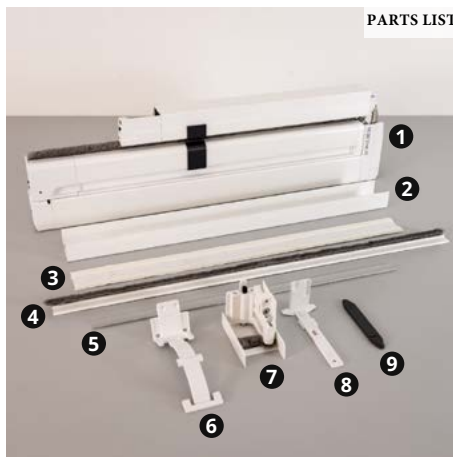




#### TOOLS

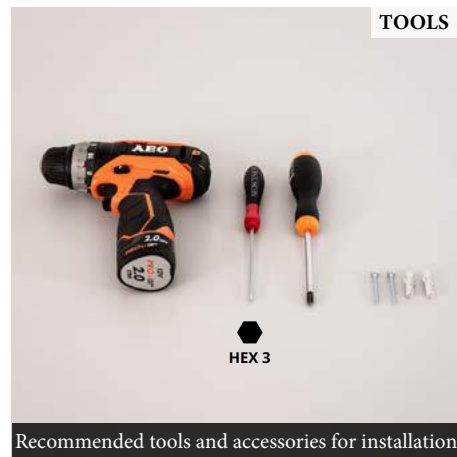











Recommended tools and accessories for installation.









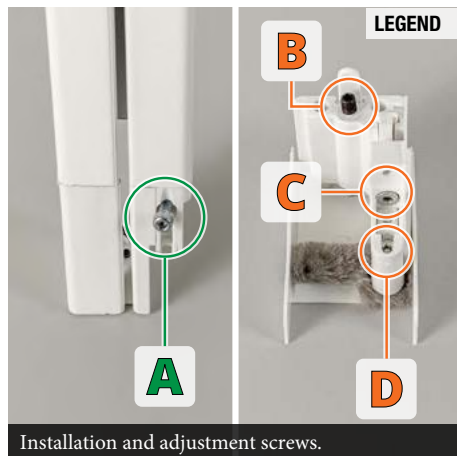



Installation and adjustment screws.

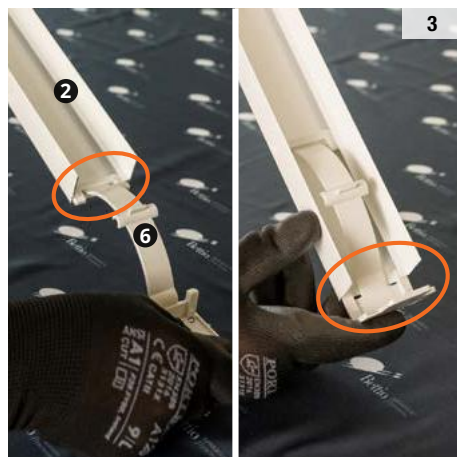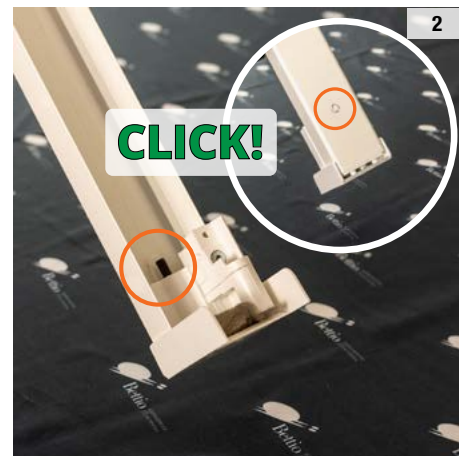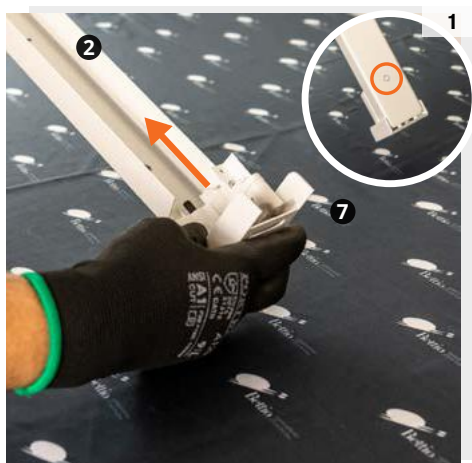


OK!

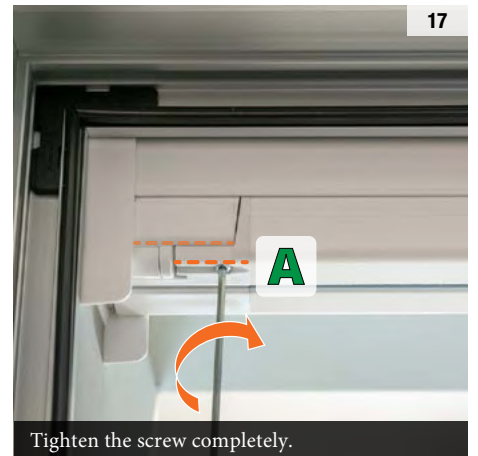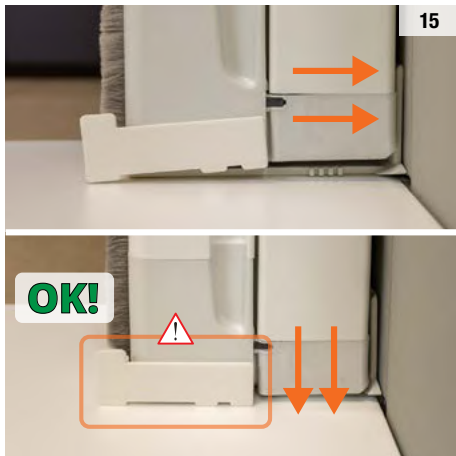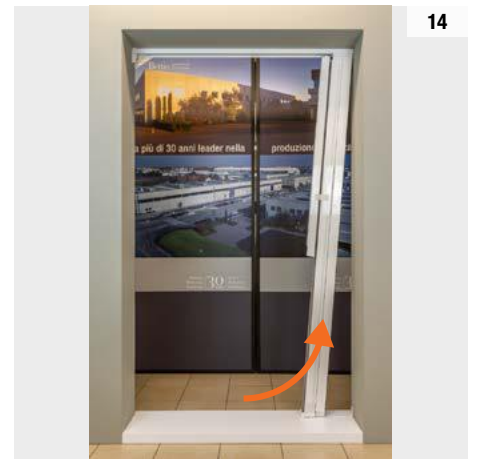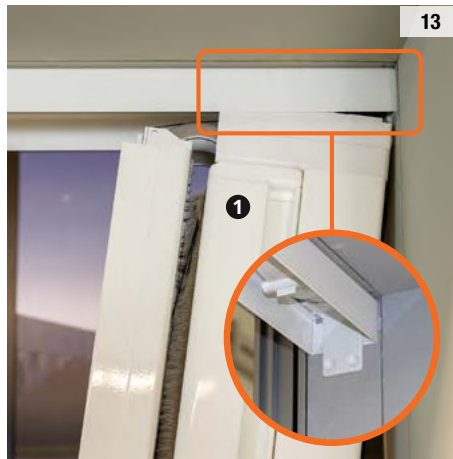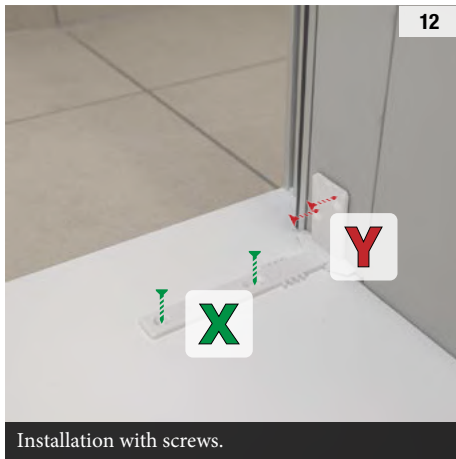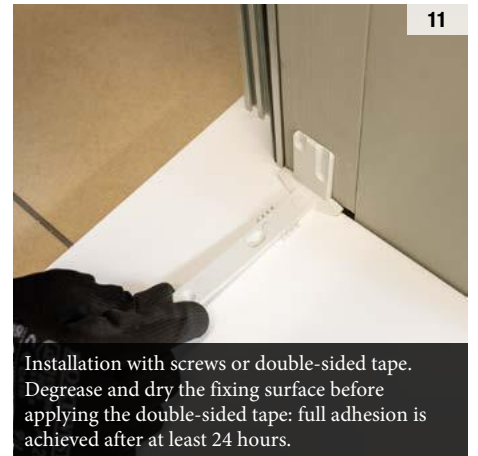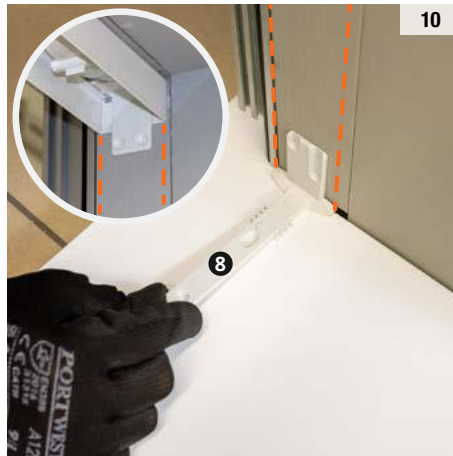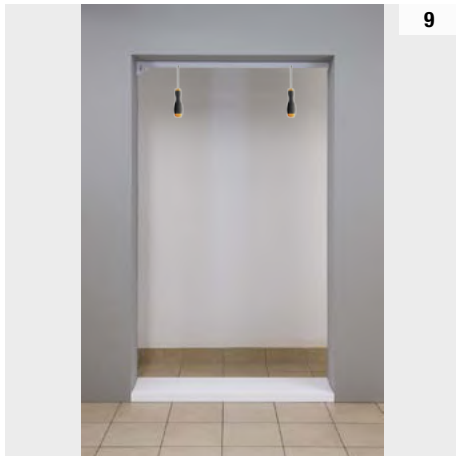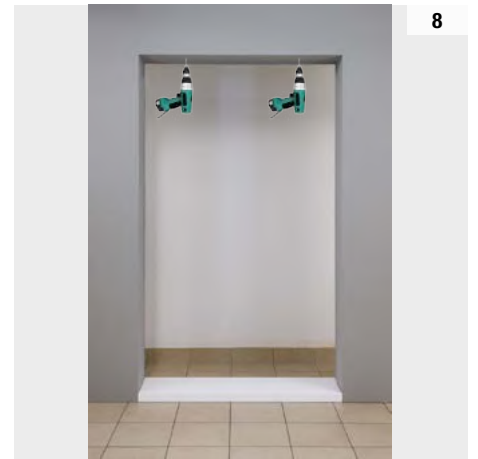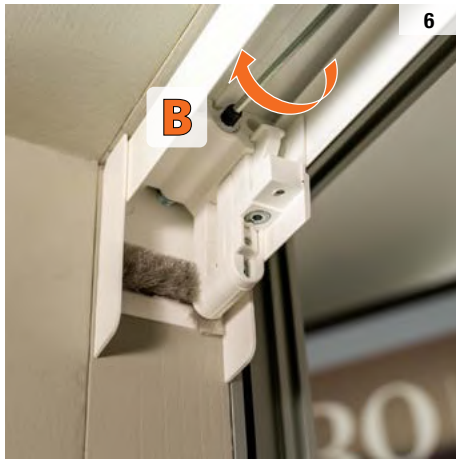

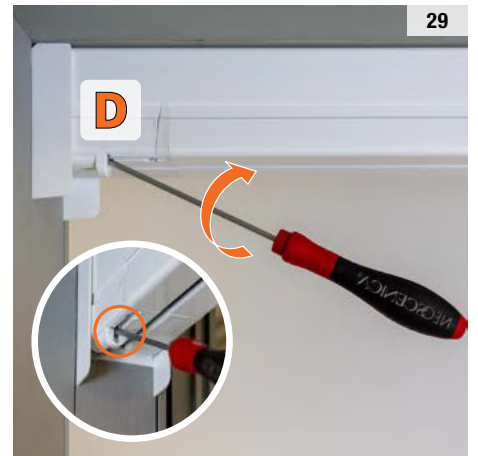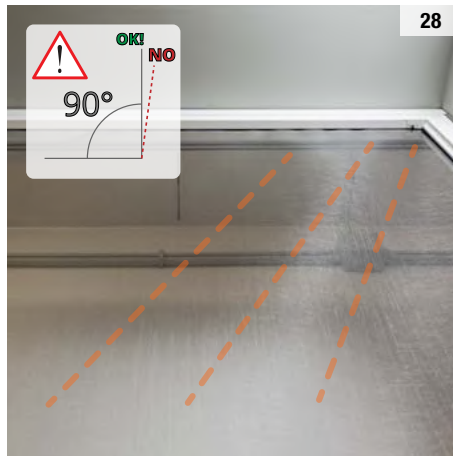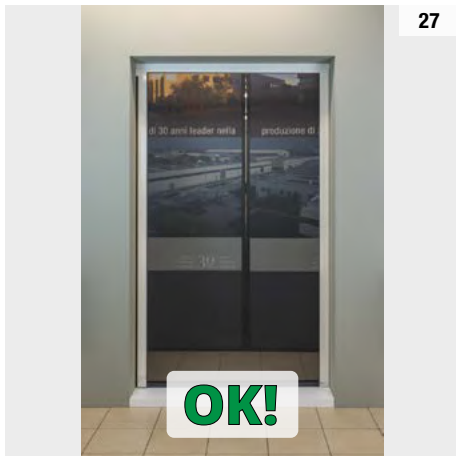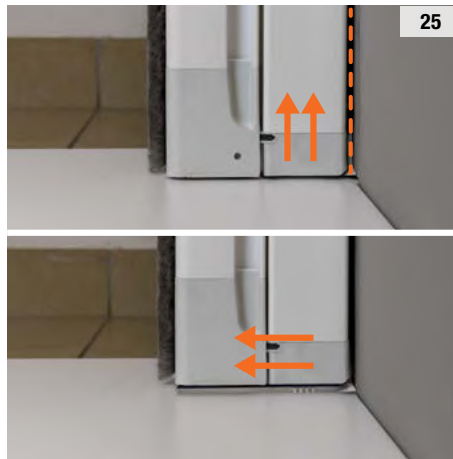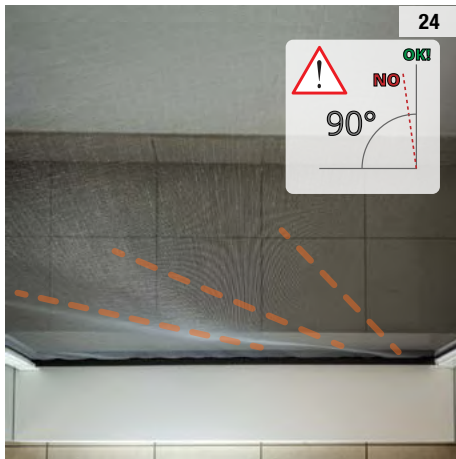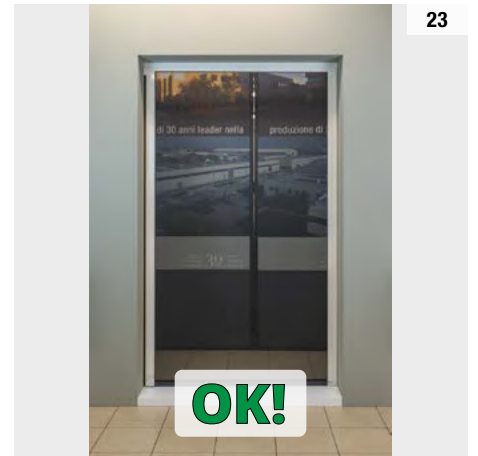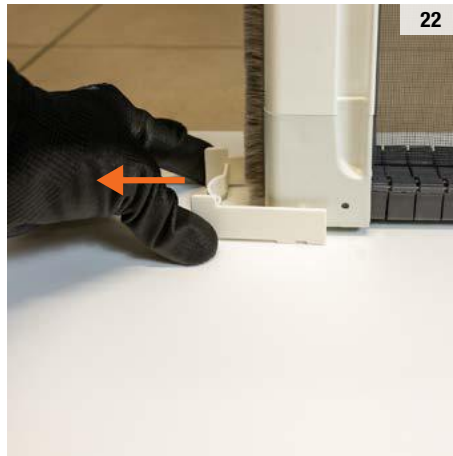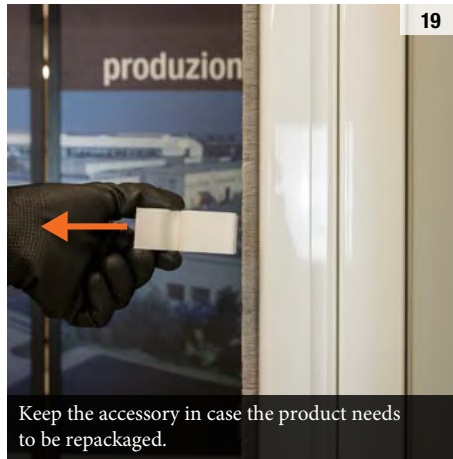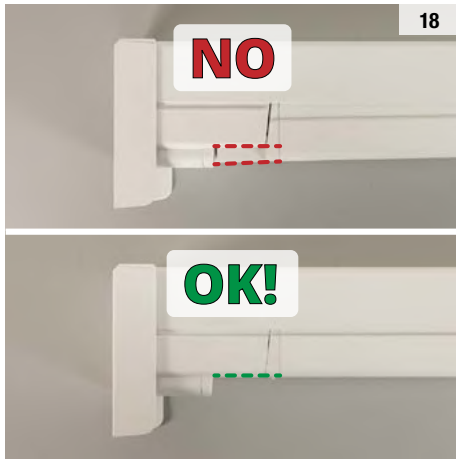

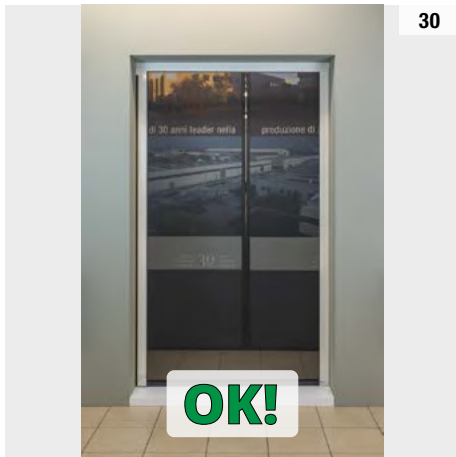


30

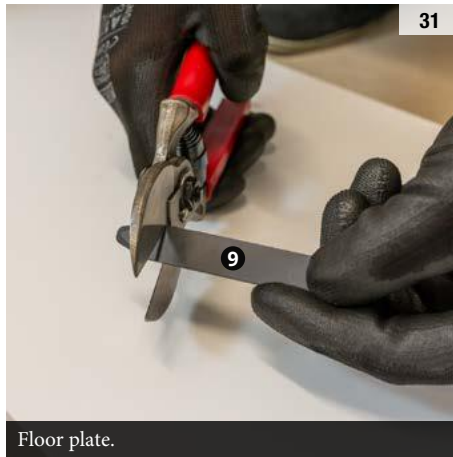


31

Floor plate.

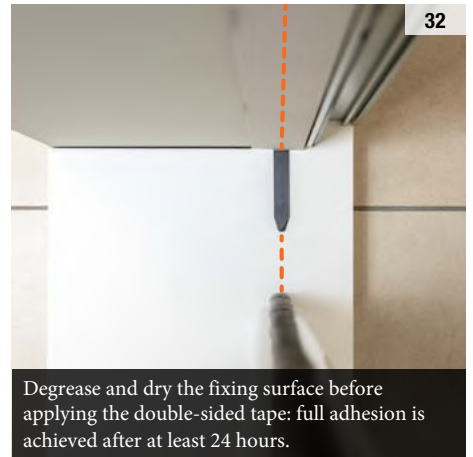


32

Degrease and dry the fixing surface before applying the double-sided tape: full adhesion is achieved after at least 24 hours.

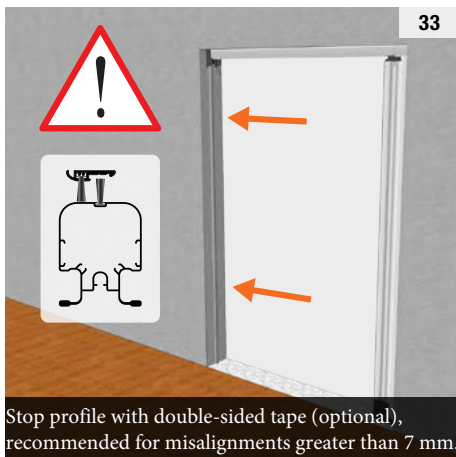

33

Stop profile with double-sided tape (optional), recommended for misalignments greater than 7 mm.

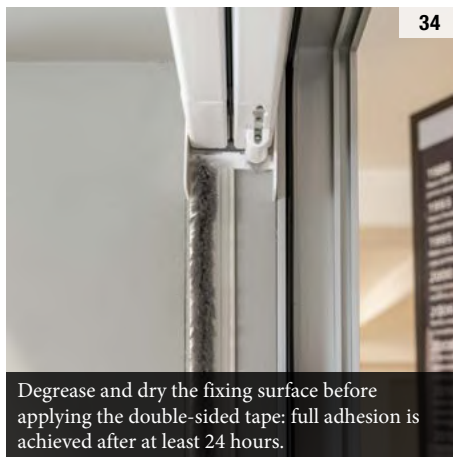


34

Degrease and dry the fixing surface before applying the double-sided tape: full adhesion is achieved after at least 24 hours.



35

Sliding profile. Complementary accessory. Installation at discretion.

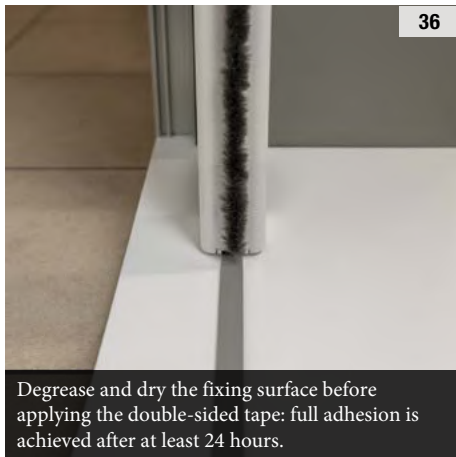

36

Degrease and dry the fixing surface before applying the double-sided tape: full adhesion is achieved after at least 24 hours.