




INSTALLATION INSTRUCTIONS

METHOD 2 – 1 DOOR WITH SCREWS

PARTS LIST

- 1 Fly screen
- 2 Adjuster profile
- 3 Double-sided tape for compensation profile
- 4 Side profile (optional)
- 5 Sliding profile (optional)
- 6 Push spring
- 7 Push group
- 8 Fixing Plate
- 9 Floor plate


PARTS LIST

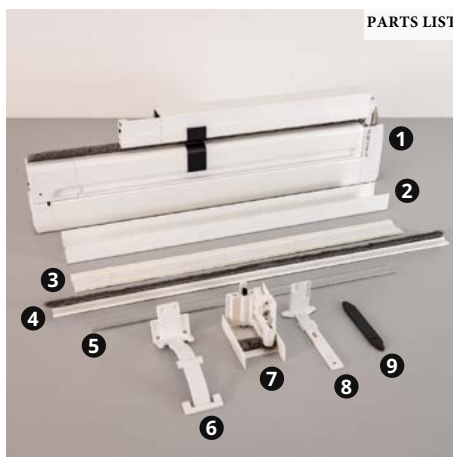



TOOLS





Recommended tools and accessories for installation.

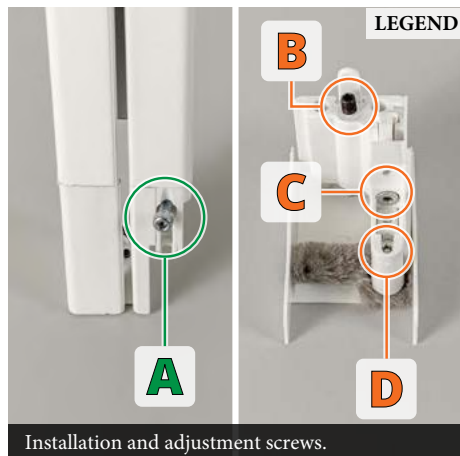


Installation and adjustment screws.



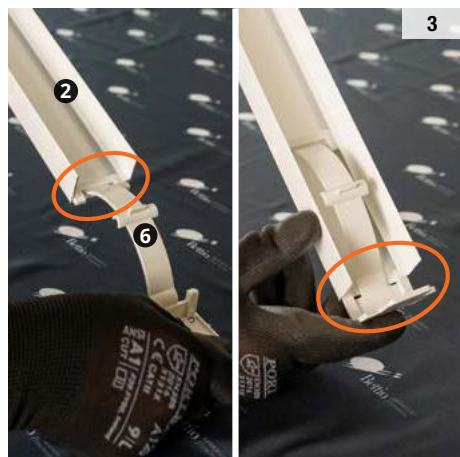
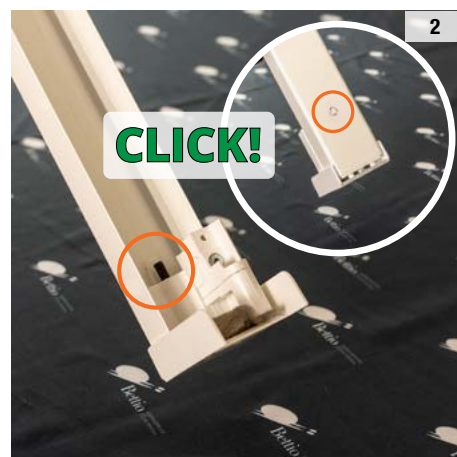


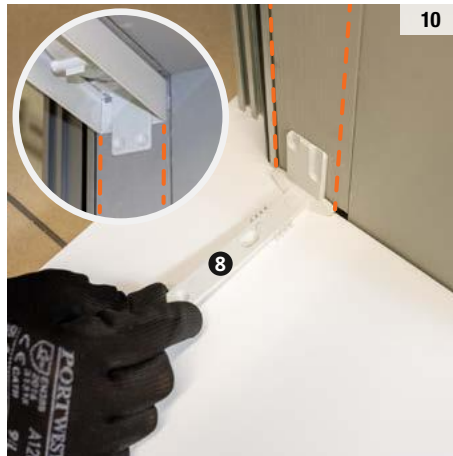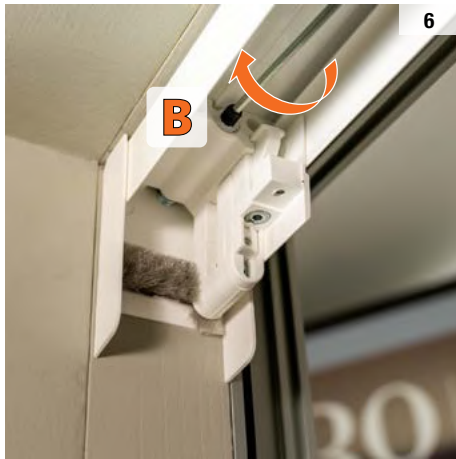


Installation with double-sided tape.
Degrease and dry the fixing surface before
applying the double-sided tape: full adhesion is
achieved after at least 24 hours.

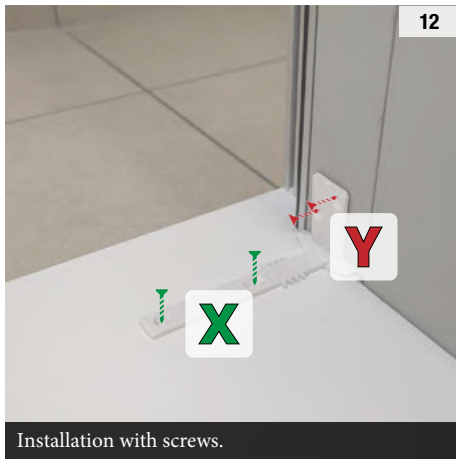










Installation with screws.

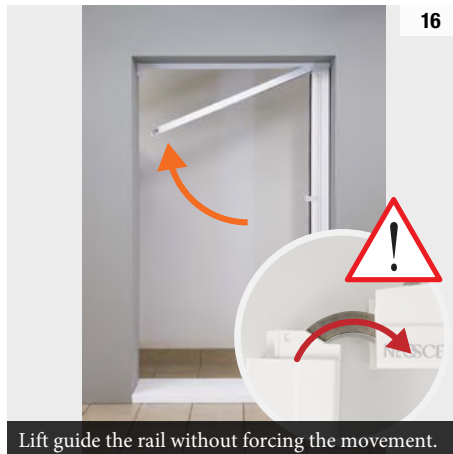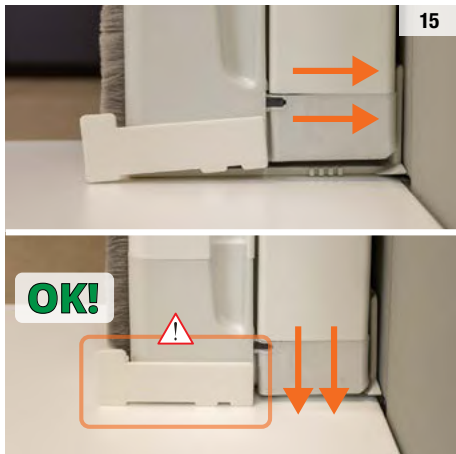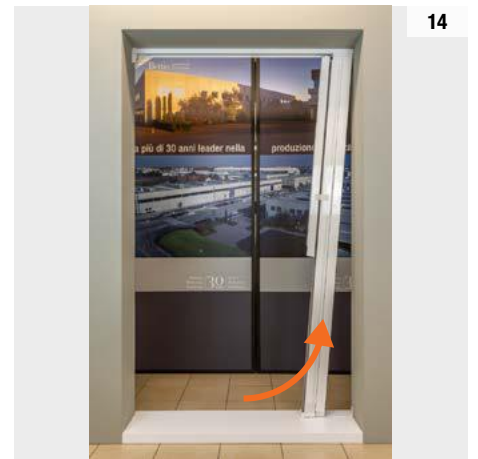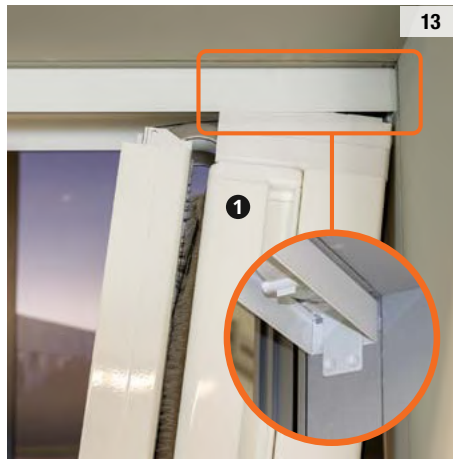


Lift guide the rail without forcing the movement.

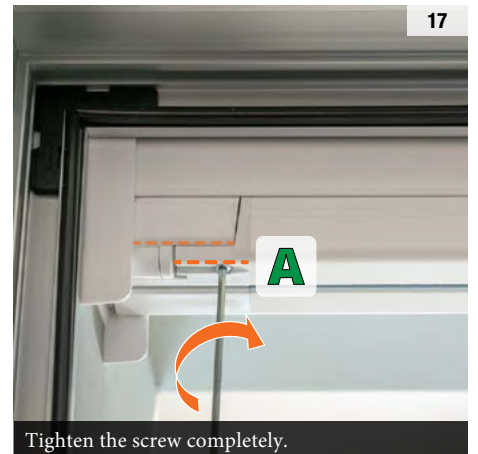


Tighten the screw completely.

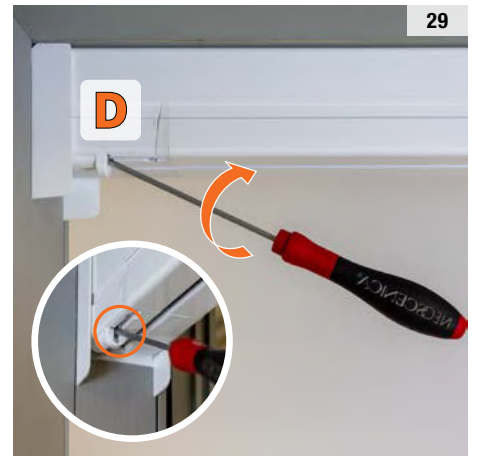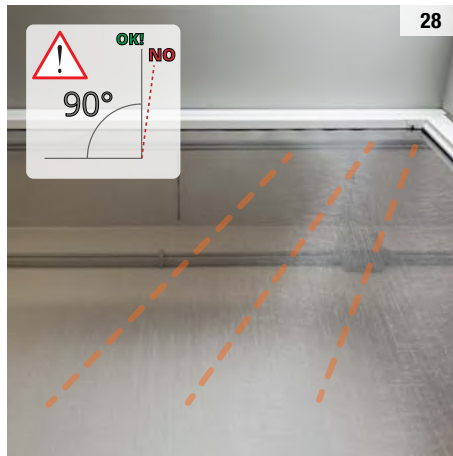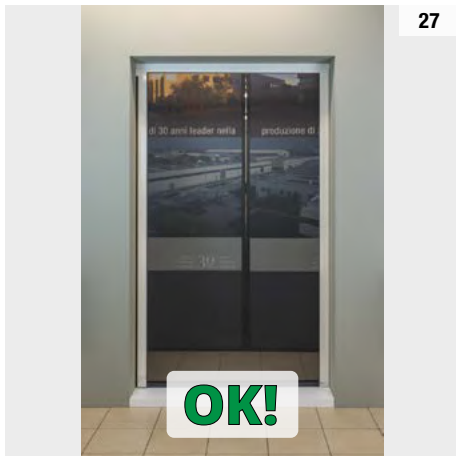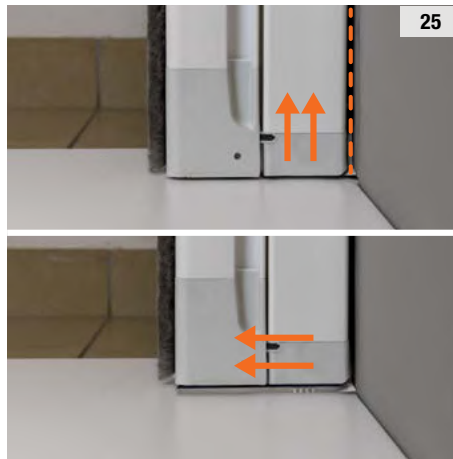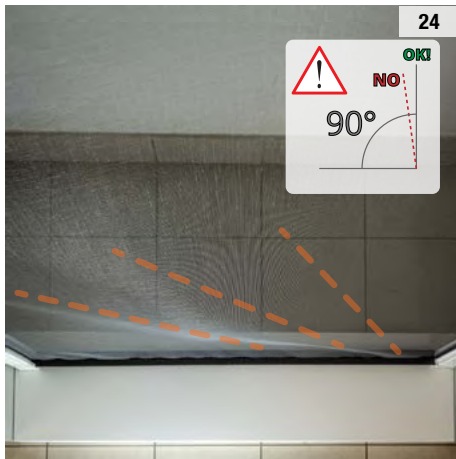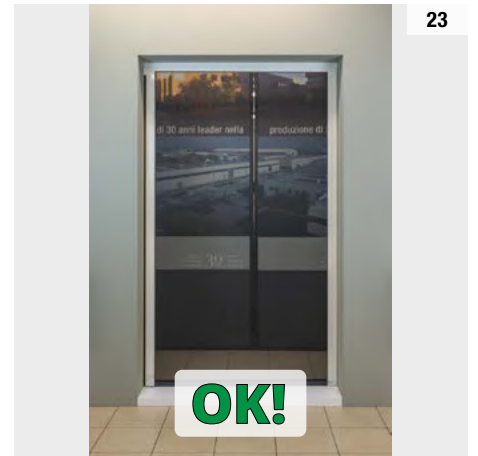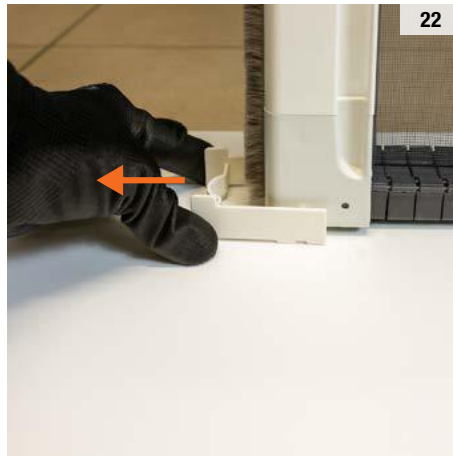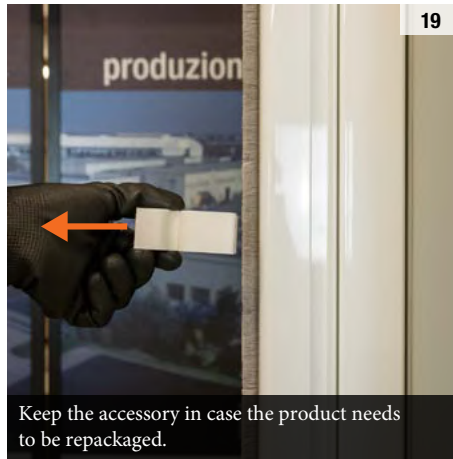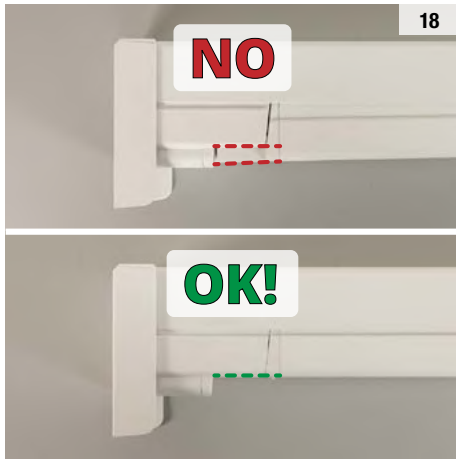

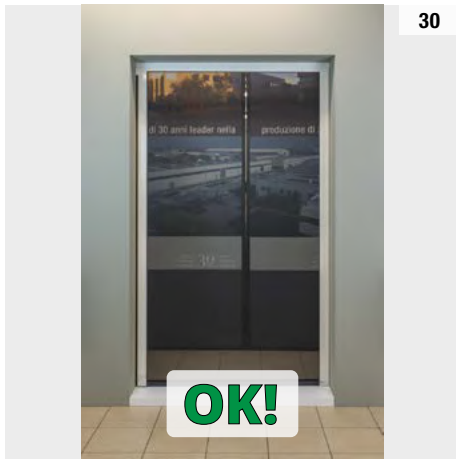


30

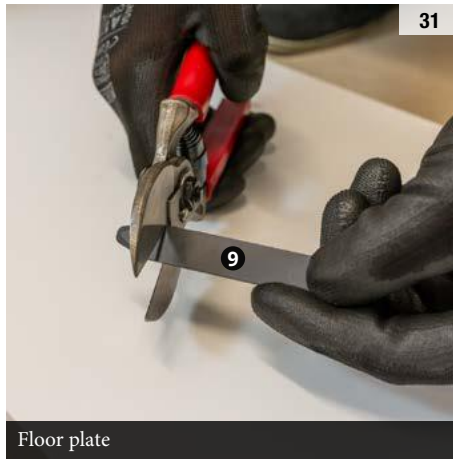


31

Floor plate

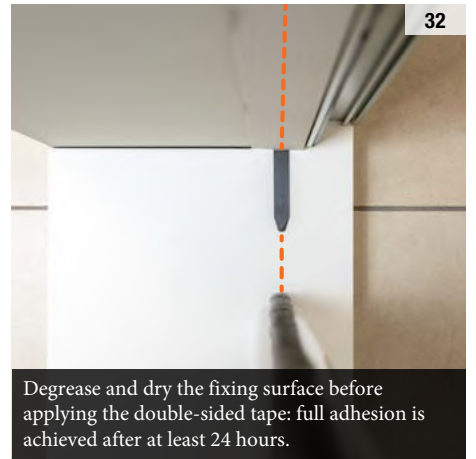


32

Degrease and dry the fixing surface before applying the double-sided tape: full adhesion is achieved after at least 24 hours.

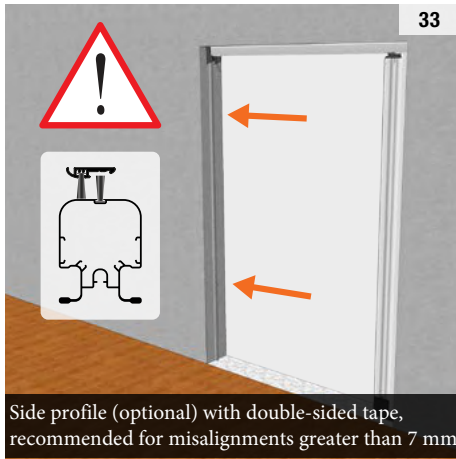

33

Side profile (optional) with double-sided tape, recommended for misalignments greater than 7 mm.

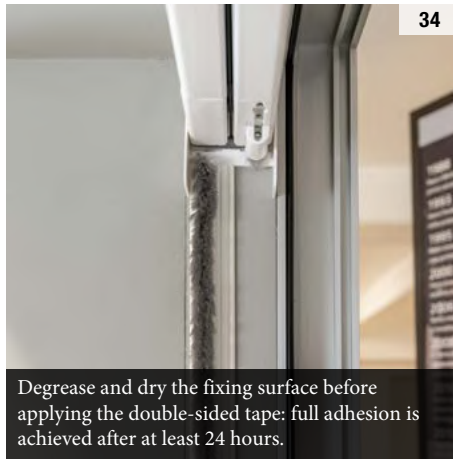


34

Degrease and dry the fixing surface before applying the double-sided tape: full adhesion is achieved after at least 24 hours.



35

Sliding profile. Optional accessory. Installation at discretion.

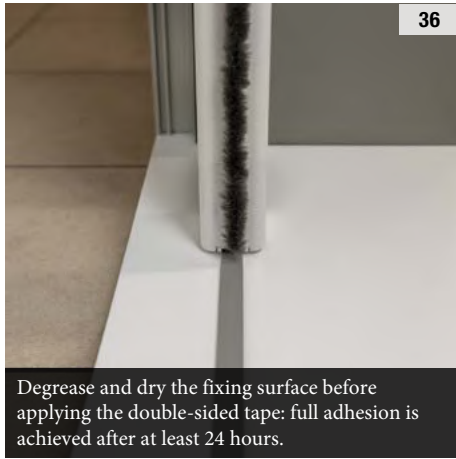

36

Degrease and dry the fixing surface before applying the double-sided tape: full adhesion is achieved after at least 24 hours.