



## INSTALLATION INSTRUCTIONS

### METHOD 4 – 1 DOOR

#### WARNING




For the installation of the flyscreen +, only the indicated accessories must be used.

#### PARTS LIST

- 1 Fly screen
- 2 Adjuster profile
- 3 Side profile
- 4 Sliding profile (optional)
- 5 Double-sided perimeter brush seal
- 6 Front fixing brackets (left and right)
- 7 Push spring
- 8 Push group
- 9 Fixing Plate
- 10 Floor plate
- 11 Cap for endcaps (x2)

#### PARTS LIST

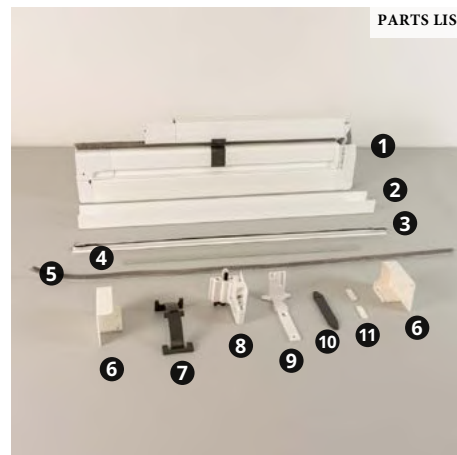


#### TOOLS



HEX 3


Recommended tools and accessories for installation.

#### LEGEND

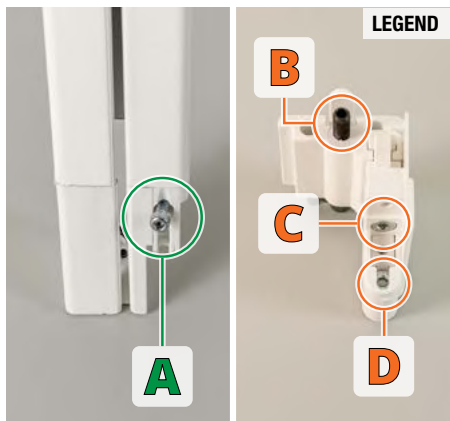

Installation and adjustment screws.


1

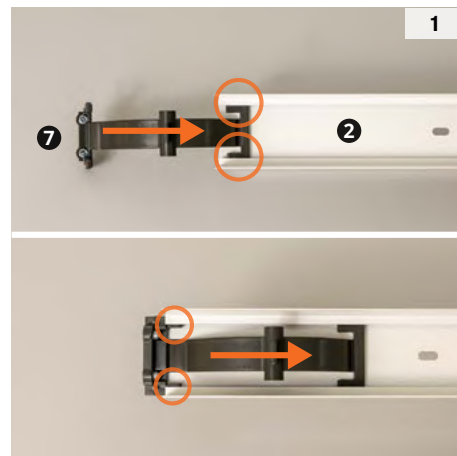

2




3

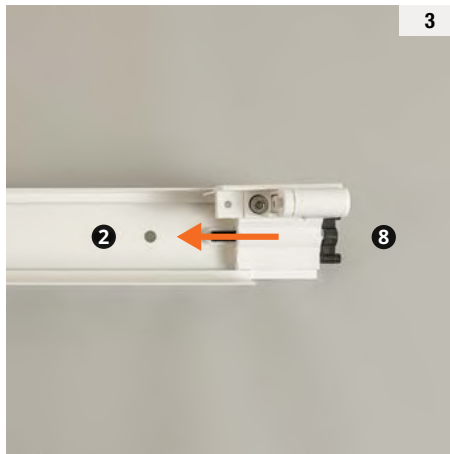


4





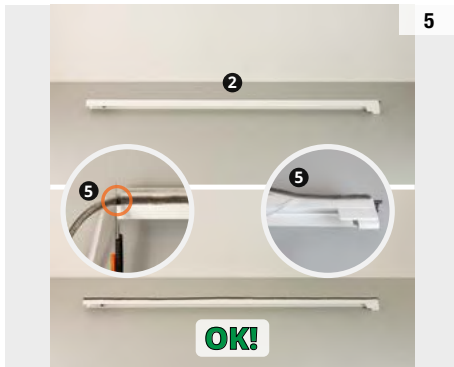




Degrease and dry the fixing surface before applying the double-sided tape: full adhesion is achieved after at least 24 hours.

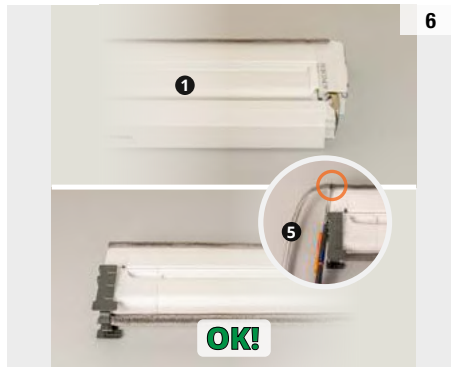




Degrease and dry the fixing surface before applying the double-sided tape: full adhesion is achieved after at least 24 hours.

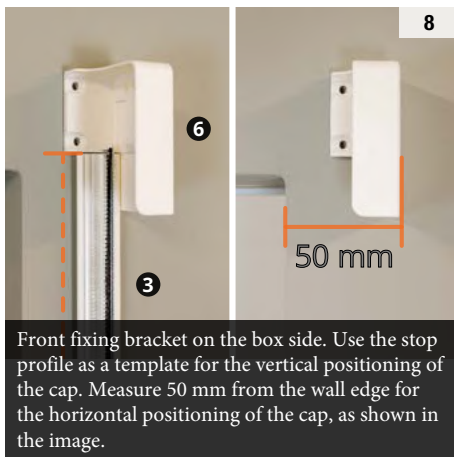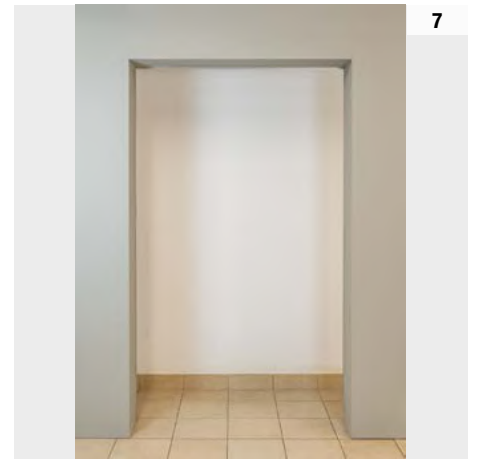



Front fixing bracket on the box side. Use the stop profile as a template for the vertical positioning of the cap. Measure 50 mm from the wall edge for the horizontal positioning of the cap, as shown in the image.




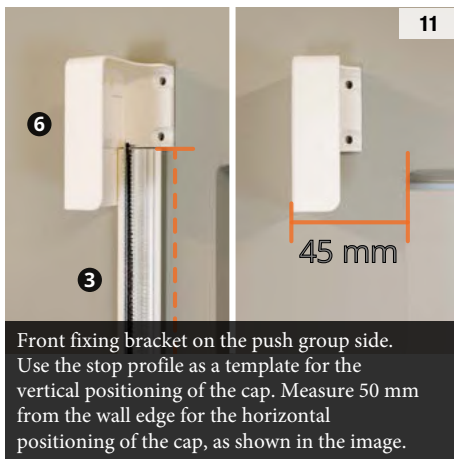
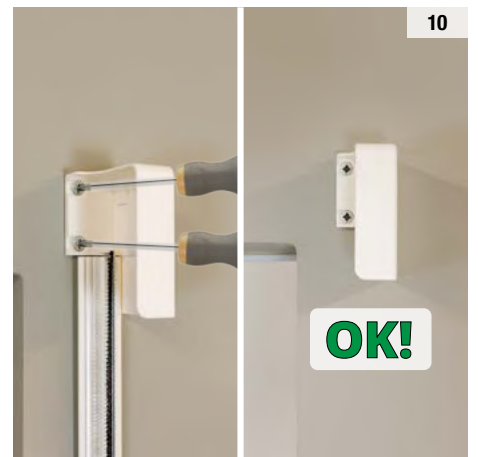
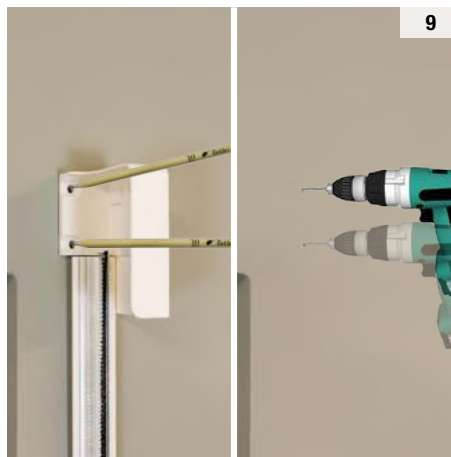









Front fixing bracket on the push group side. Use the stop profile as a template for the vertical positioning of the cap. Measure 50 mm from the wall edge for the horizontal positioning of the cap, as shown in the image.

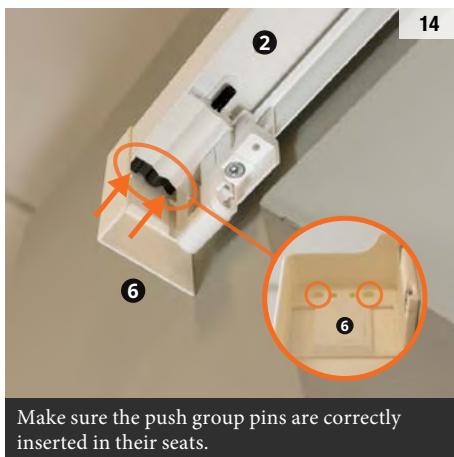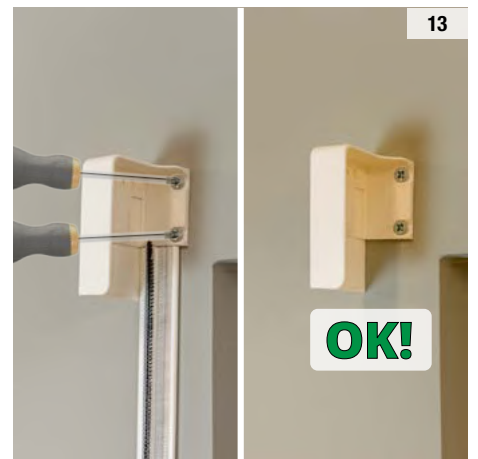
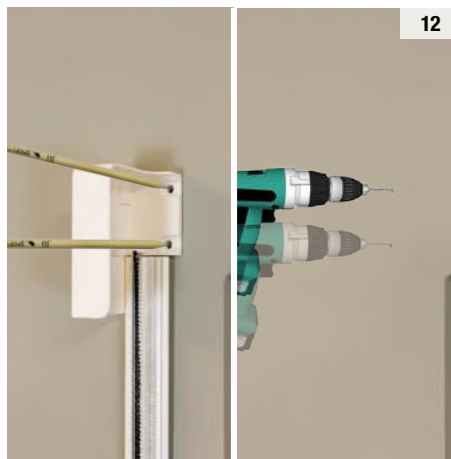


Make sure the push group pins are correctly inserted in their seats.

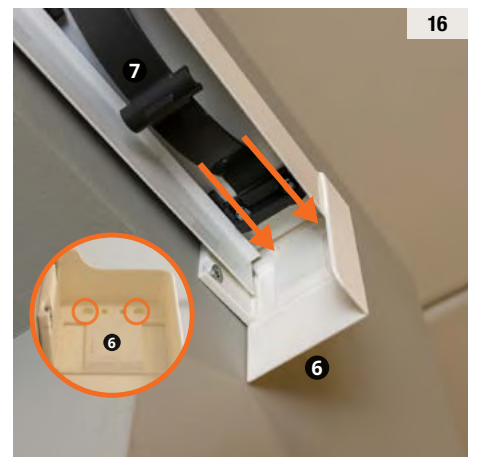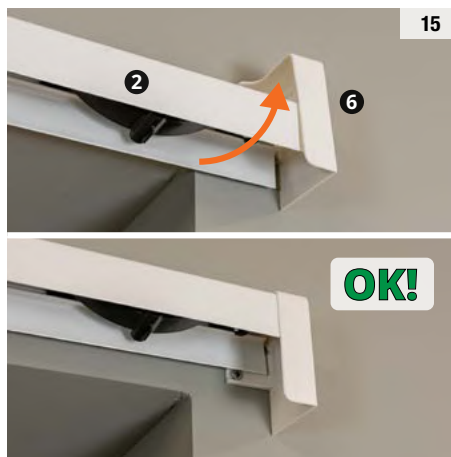

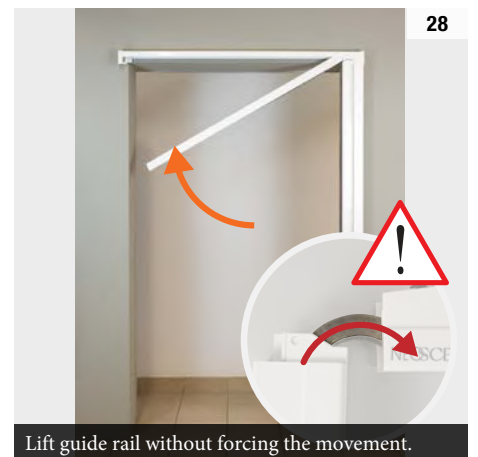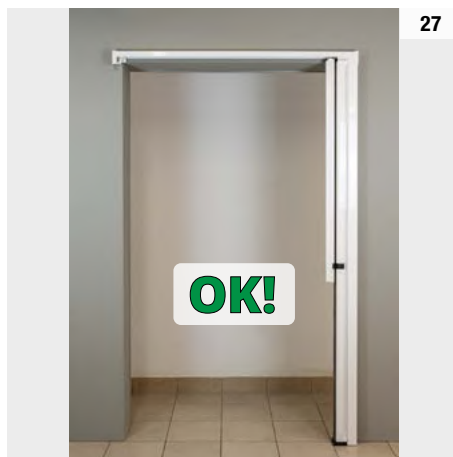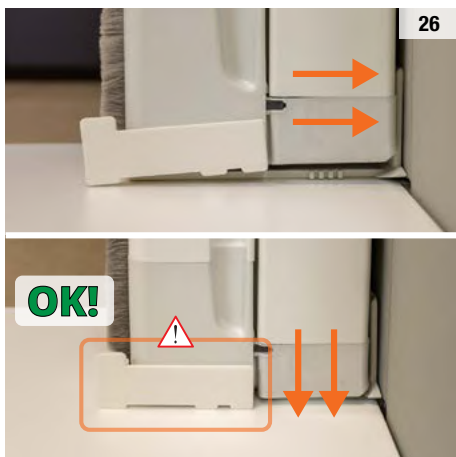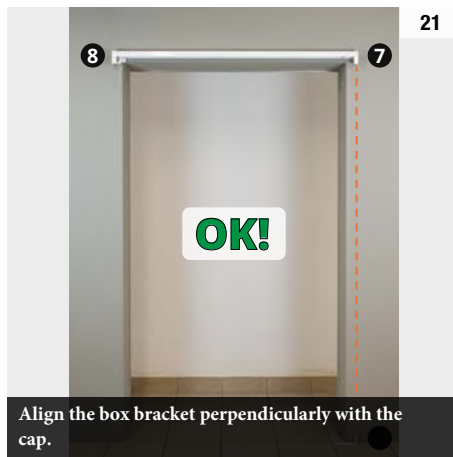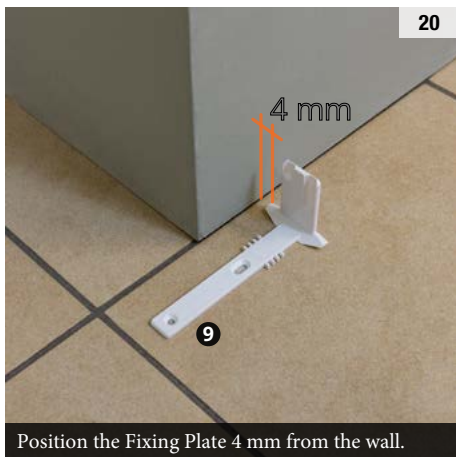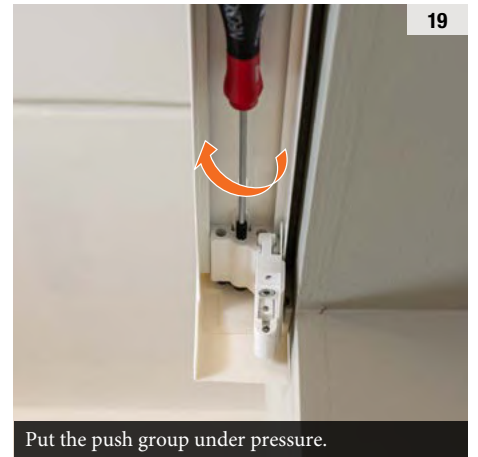

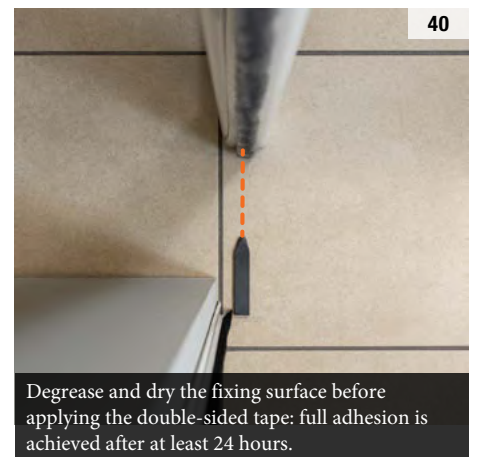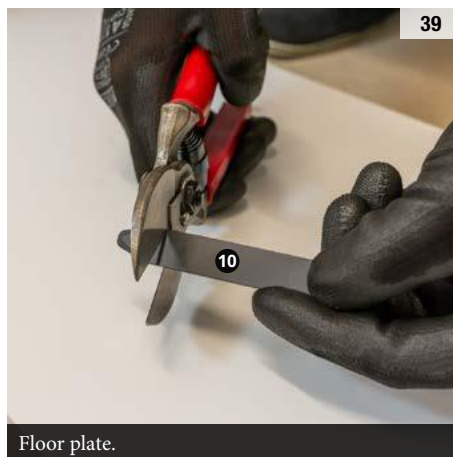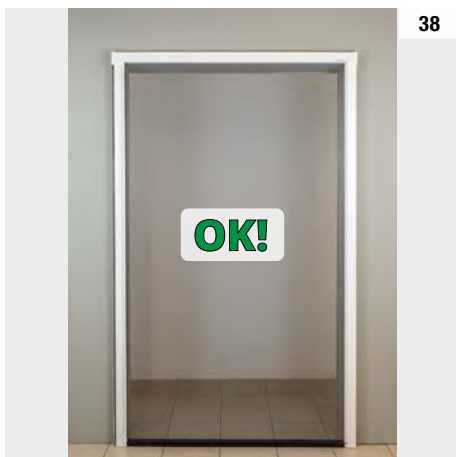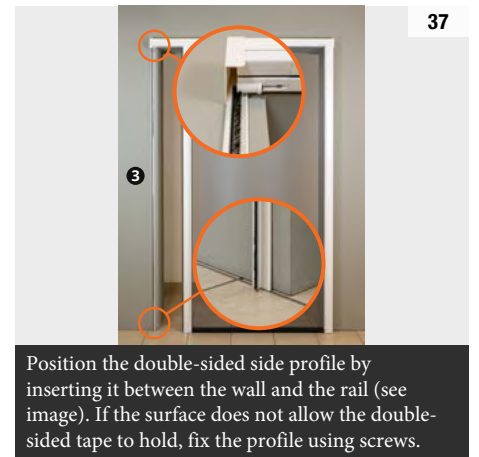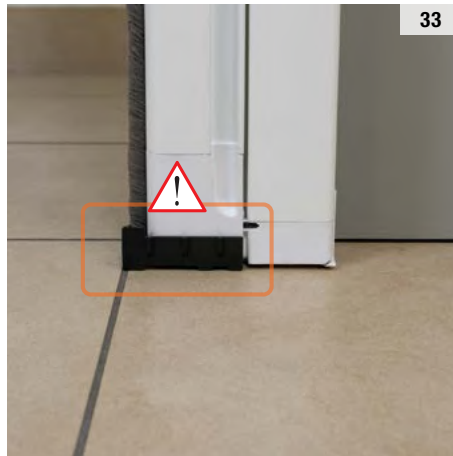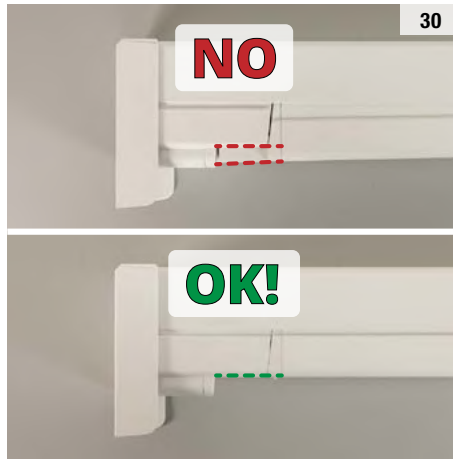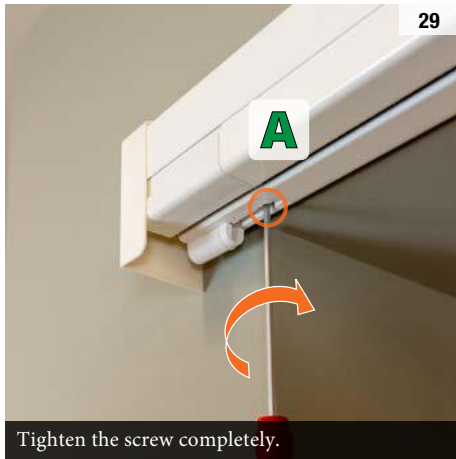

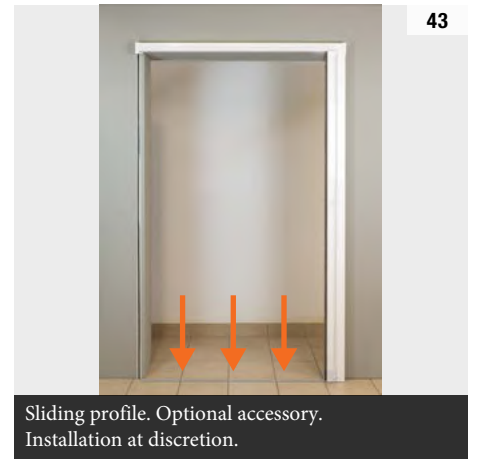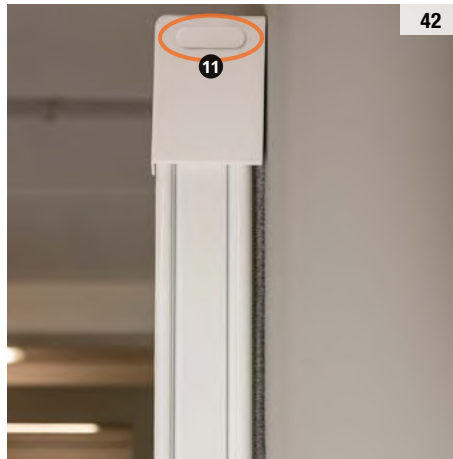

Sliding profile. Optional accessory.  
Installation at discretion.

