

Adjusting the Pre-set Limit Settings

Somfy® RTS Contact Sensing Motors

The installation process to adjust the limits is simple. Follow the steps below to ensure that the proper limits are set. Adjust each screen individually before connecting and operating as a group.

ADJUST THE UPPER LIMIT

1. Move the motor to its preset UPPER limit position and let it stop
2. Press the **UP** and **DOWN** buttons simultaneously on the transmitter until the motor jogs, then release
3. Adjust to a **NEW UPPER** limit position
4. Press the **MY/STOP** button until the motor jogs, then release.
5. Check it



ADJUST THE LOWER LIMIT

1. Move the motor to its preset **LOWER** limit position and let it stop
2. Press the **UP** and **DOWN** buttons simultaneously on the transmitter until the motor jogs, then release
3. Adjust to a new **LOWER** limit position
4. Press the **MY/STOP** button until the motor jogs, then release.
5. Check it




For Limit Setting example watch: <https://youtu.be/fmyRXkBj8MA>

Setting the Contact Sensitivity


Before making any adjustments to the motors sensitivity settings, first test the factory settings. While the screen is in operation, place your hand within its path around the centre point of the screen. The motor should immediately stop operating once the screen comes into contact with your hand. Test again with your hand near one of the guide rails. If sensitivity adjustments are required after performing these tests, follow the instructions below.

ENTER THE SENSITIVITY SETTING MODE

Move the screen to halfway position, press **MY** and **UP** briefly. Press **MY** and **UP** again until the screen jogs.

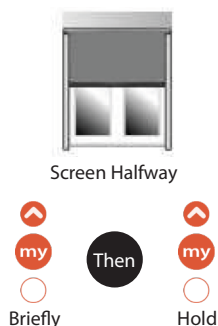

Screen Halfway

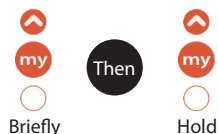

Briefly

Hold



Short Jog

CHANGE THE SENSITIVITY SETTING LEVEL

If the actuator goes back to **USER MODE** (short jog) repeat Step 1.

To Deactivate:

Press **UP** briefly within 2 seconds and then press **UP** briefly again. The screen will jog slowly and is now deactivated.

If the jog is short you have reached the default setting. To deactivate, press **UP** again.



Long Jog

To Increase Sensitivity:

Press **DOWN** briefly within 2 seconds and then press **DOWN** briefly again. The screen will jog slowly and is now more sensitive.

If the jog is short you have reached the default setting. To increase sensitivity press **DOWN** again.



Long Jog

CONFIRM THE NEW SETTING & EXIT THE SETTING MODE

Press **MY/STOP** until the screen jogs to confirm the new setting.

The registered level of sensitivity will be reached when entering Step 1 again.

 more information watch: <https://youtu.be/SyI550rLCMk>